

The 99PL inner shell/air plenum fits the 88VX™ Series supplied-air respirator manufactured by Bullard. Install the 99PL according to the following instructions.

⚠WARNING

88VX Series Respirator Helmet Assembly

Read all instructions and warnings before using this respirator.

 
This Inner Shell/Air Plenum is only one part of a complete 88VX Series Respiratory System. The Inner Shell/Air Plenum must be properly installed into a Bullard Outer Shell Helmet in order to provide limited head protection by reducing the force of falling objects striking the top of the helmet. While it will provide limited protection in other parts of the helmet, it is not designed to provide front, side, or rear impact protection. Avoid areas unprotected from falling objects whenever possible. Avoid helmet contact with electrical wires. Never alter or modify helmet or suspension system. Inspect regularly. Immediately replace helmet shell or suspension at first sign of wear, damage, or plastic degradation. Protection may be reduced if there are signs of damage due to impact, wear or abuse. Use only the proper Bullard suspension system with this helmet. See suspension instructions for more detail. Clean only with mild detergent and water. Do not use paints (unless approved by Bullard), solvents, chemicals, adhesives, gasoline, or like substances on this helmet.

Failure to follow these warnings could result in death or serious injury.

Meets Type 1, Class C requirements of ANSI Z89.1 for top impact and penetration.



1898 Safety Way-Cynthiana, KY 41031
Toll free 877-BULLARD (285-5273) • Fax 1-859-246-0243

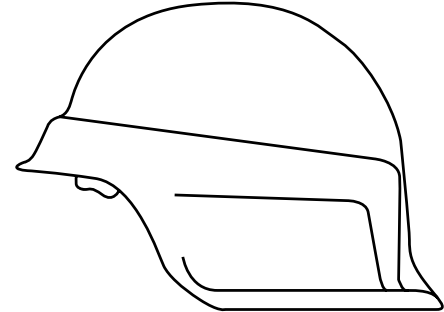

The 99PL inner shell/air plenum fits the 88VX™ Series supplied-air respirator manufactured by Bullard. Install the 99PL according to the following instructions.

⚠WARNING

88VX Series Respirator Helmet Assembly

Read all instructions and warnings before using this respirator.

 
This Inner Shell/Air Plenum is only one part of a complete 88VX Series Respiratory System. The Inner Shell/Air Plenum must be properly installed into a Bullard Outer Shell Helmet in order to provide limited head protection by reducing the force of falling objects striking the top of the helmet. While it will provide limited protection in other parts of the helmet, it is not designed to provide front, side, or rear impact protection. Avoid areas unprotected from falling objects whenever possible. Avoid helmet contact with electrical wires. Never alter or modify helmet or suspension system. Inspect regularly. Immediately replace helmet shell or suspension at first sign of wear, damage, or plastic degradation. Protection may be reduced if there are signs of damage due to impact, wear or abuse. Use only the proper Bullard suspension system with this helmet. See suspension instructions for more detail. Clean only with mild detergent and water. Do not use paints (unless approved by Bullard), solvents, chemicals, adhesives, gasoline, or like substances on this helmet.

Failure to follow these warnings could result in death or serious injury.

Meets Type 1, Class C requirements of ANSI Z89.1 for top impact and penetration.



1898 Safety Way-Cynthiana, KY 41031
Toll free 877-BULLARD (285-5273) • Fax 1-859-246-0243

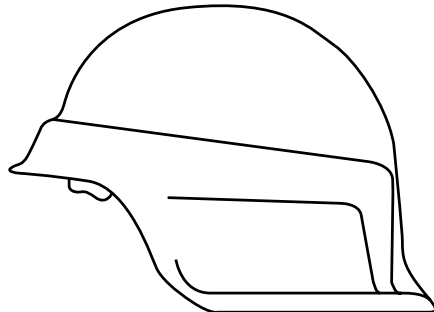

The 99PL inner shell/air plenum fits the 88VX™ Series supplied-air respirator manufactured by Bullard. Install the 99PL according to the following instructions.

⚠WARNING

88VX Series Respirator Helmet Assembly

Read all instructions and warnings before using this respirator.

 
This Inner Shell/Air Plenum is only one part of a complete 88VX Series Respiratory System. The Inner Shell/Air Plenum must be properly installed into a Bullard Outer Shell Helmet in order to provide limited head protection by reducing the force of falling objects striking the top of the helmet. While it will provide limited protection in other parts of the helmet, it is not designed to provide front, side, or rear impact protection. Avoid areas unprotected from falling objects whenever possible. Avoid helmet contact with electrical wires. Never alter or modify helmet or suspension system. Inspect regularly. Immediately replace helmet shell or suspension at first sign of wear, damage, or plastic degradation. Protection may be reduced if there are signs of damage due to impact, wear or abuse. Use only the proper Bullard suspension system with this helmet. See suspension instructions for more detail. Clean only with mild detergent and water. Do not use paints (unless approved by Bullard), solvents, chemicals, adhesives, gasoline, or like substances on this helmet.

Failure to follow these warnings could result in death or serious injury.

Meets Type 1, Class C requirements of ANSI Z89.1 for top impact and penetration.



1898 Safety Way-Cynthiana, KY 41031
Toll free 877-BULLARD (285-5273) • Fax 1-859-246-0243

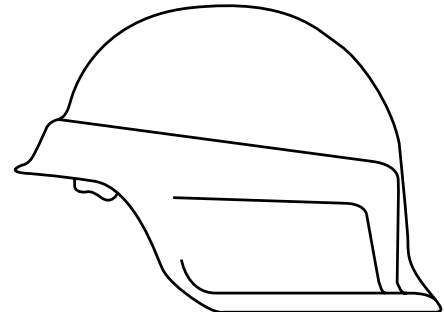

The 99PL inner shell/air plenum fits the 88VX™ Series supplied-air respirator manufactured by Bullard. Install the 99PL according to the following instructions.

⚠WARNING

88VX Series Respirator Helmet Assembly

Read all instructions and warnings before using this respirator.

This Inner Shell/Air Plenum is only one part of a complete 88VX Series Respiratory System. The Inner Shell/Air Plenum must be properly installed into a Bullard Outer Shell Helmet in order to provide limited head protection by reducing the force of falling objects striking the top of the helmet. While it will provide limited protection in other parts of the helmet, it is not designed to provide front, side, or rear impact protection. Avoid areas unprotected from falling objects whenever possible. Avoid helmet contact with electrical wires. Never alter or modify helmet or suspension system. Inspect regularly. Immediately replace helmet shell or suspension at first sign of wear, damage, or plastic degradation. Protection may be reduced if there are signs of damage due to impact, wear or abuse. Use only the proper Bullard suspension system with this helmet. See suspension instructions for more detail. Clean only with mild detergent and water. Do not use paints (unless approved by Bullard), solvents, chemicals, adhesives, gasoline, or like substances on this helmet.

Failure to follow these warnings could result in death or serious injury.

Meets Type 1, Class C requirements of ANSI Z89.1 for top impact and penetration.



1898 Safety Way-Cynthiana, KY 41031
Toll free 877-BULLARD (285-5273) • Fax 1-859-246-0243

I. Removing Inner Shell

1. Open hinged window frame by lifting up on window latch.
2. Remove cape from helmet by lifting up on over-center clamp and disengaging cape from helmet groove (see Figure 1).
3. Turn helmet upside down to remove inner shell from helmet.
4. Hook index finger into loop on back of inner shell.
5. Press thumb against helmet rim and pull loop toward front of helmet, then pull shell up and away from the molded notch located on the helmet (see Figure 2).

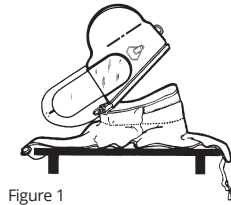 


Figure 1



Figure 2

II. Installing Inner Shell Replacement

1. With helmet turned upside down, insert inner shell into helmet with front of shell tilted downward.
2. Align the V-shaped opening located at front of shell with washer at front of helmet (see Figure 3). Press back of shell into helmet until it snaps inside the rim and molded notch.
3. Reattach cape to helmet.



Figure 3



1898 Safety Way•Cynthiana, KY 41031
Toll free 877-BULLARD (285-5273)
Fax 1-859-246-0243
www.bullard.com

©2023 Bullard. All rights reserved.
Bullard and Sure-Lock are
registered trademarks of Bullard.

6080995635C (1023)

I. Removing Inner Shell

1. Open hinged window frame by lifting up on window latch.
2. Remove cape from helmet by lifting up on over-center clamp and disengaging cape from helmet groove (see Figure 1).
3. Turn helmet upside down to remove inner shell from helmet.
4. Hook index finger into loop on back of inner shell.
5. Press thumb against helmet rim and pull loop toward front of helmet, then pull shell up and away from the molded notch located on the helmet (see Figure 2).

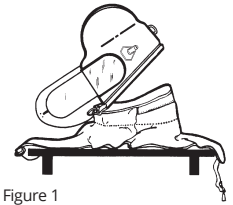 


Figure 1



Figure 2

II. Installing Inner Shell Replacement

1. With helmet turned upside down, insert inner shell into helmet with front of shell tilted downward.
2. Align the V-shaped opening located at front of shell with washer at front of helmet (see Figure 3). Press back of shell into helmet until it snaps inside the rim and molded notch.
3. Reattach cape to helmet.



Figure 3



1898 Safety Way•Cynthiana, KY 41031
Toll free 877-BULLARD (285-5273)
Fax 1-859-246-0243
www.bullard.com

©2023 Bullard. All rights reserved.
Bullard and Sure-Lock are
registered trademarks of Bullard.

6080995635C (1023)

I. Removing Inner Shell

1. Open hinged window frame by lifting up on window latch.
2. Remove cape from helmet by lifting up on over-center clamp and disengaging cape from helmet groove (see Figure 1).
3. Turn helmet upside down to remove inner shell from helmet.
4. Hook index finger into loop on back of inner shell.
5. Press thumb against helmet rim and pull loop toward front of helmet, then pull shell up and away from the molded notch located on the helmet (see Figure 2).

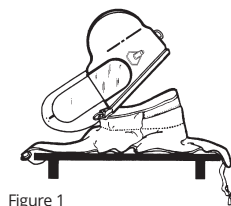 


Figure 1



Figure 2

II. Installing Inner Shell Replacement

1. With helmet turned upside down, insert inner shell into helmet with front of shell tilted downward.
2. Align the V-shaped opening located at front of shell with washer at front of helmet (see Figure 3). Press back of shell into helmet until it snaps inside the rim and molded notch.
3. Reattach cape to helmet.



Figure 3



1898 Safety Way•Cynthiana, KY 41031
Toll free 877-BULLARD (285-5273)
Fax 1-859-246-0243
www.bullard.com

©2023 Bullard. All rights reserved.
Bullard and Sure-Lock are
registered trademarks of Bullard.

6080995635C (1023)

I. Removing Inner Shell

1. Open hinged window frame by lifting up on window latch.
2. Remove cape from helmet by lifting up on over-center clamp and disengaging cape from helmet groove (see Figure 1).
3. Turn helmet upside down to remove inner shell from helmet.
4. Hook index finger into loop on back of inner shell.
5. Press thumb against helmet rim and pull loop toward front of helmet, then pull shell up and away from the molded notch located on the helmet (see Figure 2).

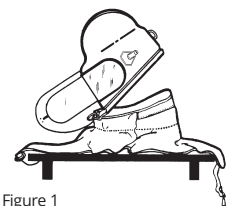 


Figure 1



Figure 2

II. Installing Inner Shell Replacement

1. With helmet turned upside down, insert inner shell into helmet with front of shell tilted downward.
2. Align the V-shaped opening located at front of shell with washer at front of helmet (see Figure 3). Press back of shell into helmet until it snaps inside the rim and molded notch.
3. Reattach cape to helmet.



Figure 3



1898 Safety Way•Cynthiana, KY 41031
Toll free 877-BULLARD (285-5273)
Fax 1-859-246-0243
www.bullard.com

©2023 Bullard. All rights reserved.
Bullard and Sure-Lock are
registered trademarks of Bullard.

6080995635C (1023)