




Climate Control Heat Shield Manual

The climate control heat shield is designed to work with the Bullard AC1000, HC2400, or ACL99 climate control devices.

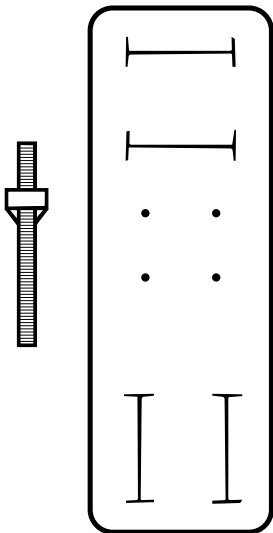



Assembly

The heat shield is designed to work with the standard nylon belt (part # 4612) supplied with the climate control devices.

1. Determine whether the climate control device will be worn vertically or horizontally on the waist.
2. If the device will be worn in the horizontal position, align the tube on the heat shield as shown in Figure 1. If the tube will be worn in the vertical position, align the tube on the heat shield as shown in Figure 2.
3. Lace the belt supplied with your climate control device through both the heat shield slots and the climate control belt bracket slots.

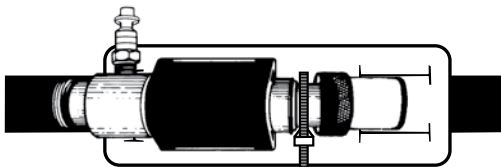


Figure 1

Climate Control Heat Shield Manual

4. Use plastic zip tie to secure the climate control unit to the heat shield.

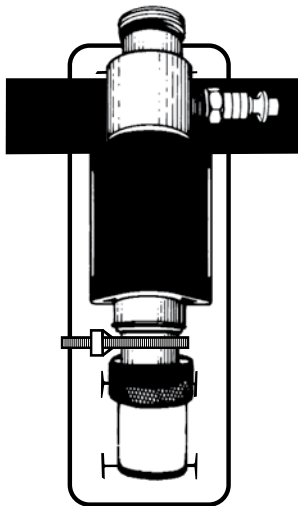


Figure 2



Climate Control Heat Shield Manual

Bullard

1898 Safety Way
Cynthiana, KY 41031-9303
Toll free: 877-BULLARD (285-5273)
Tel: 859-234-6616
Fax: 859-234-8987
www.bullard.com

Bullard GmbH

Lilienthalstrasse 12
53424 Remagen
Germany
phone: +49-2642 999980
fax : +49-2642 9999829
www.bullardextrem.com

Bullard Asia Pacific Pte. Ltd.

Cisco Centre
20 Jalan Afifi, #08-03
Singapore 409179
Tel: +65-6745-0556
Fax: +65-6745-5176
www.bullard.com



©2009 Bullard.
All rights reserved.

6088005000C (0809)