

FlexBrim Installation

1. Identify the front of the brim by locating the Bullard logo. The 'FlexBrim' name appears on the rear for added reference. (See Figure 1)

Figure 1




2. Place brim over helmet, push brim onto helmet until it feels secure (will not fall off when helmet is flipped over). (See Figure 2)

Figure 2



3. Flip helmet upside down, begin installation at the rear. Hook the back of the brim over the safety helmet's edge. Ensure the rear gutter aligns with the safety helmet's ridge, then press along the edge to secure. (See Figure 3)

Figure 3

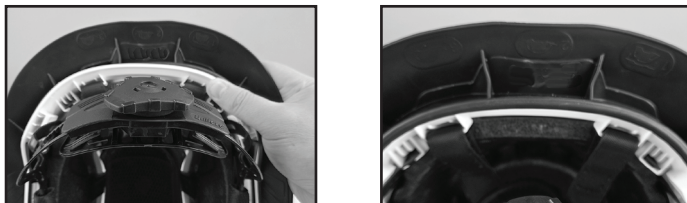


4. At the front of the helmet, ensure the brim rests against the edge of the base helmet. (See Figure 4)

Figure 4



5. Turn helmet over – bracing the helmet (works great sitting down with helmet on knees) start at right edge, pushing and folding at the same time – this will allow the front gutter to move over the helmet edge – move right to left, pushing and folding – until the gutter clicks in place (See Figure 5)

Figure 5

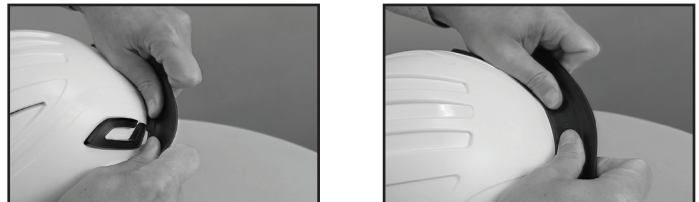

6. Turn hat over and make sure the front gutter sits correctly along the shell and press firmly along the front edge to lock it in place. (See Figure 6)

Figure 6



California Proposition 65  **WARNING**

Cancer and Reproductive Harm - www.P65Warnings.ca.gov.