

Bullard Bourke Eye Shields Replacement Part Number R319 Installation Instructions

⚠ WARNING

READ ALL INSTRUCTIONS AND WARNINGS BEFORE USING THIS PRODUCT. SAVE THIS MANUAL FOR FUTURE REFERENCE. The eye shields do NOT provide primary eye protection. The eye shields are not shatterproof and will not protect eyes from harmful rays. Large objects and/or objects travelling at high speeds may break or penetrate the eye shields and injure the wearer's face or eyes. Additional protection may be required. See ANSI/SEA Z87.1 for reference. Inspect eye shields frequently and replace if damaged. Failure to observe these warnings could result in death or serious injury.

Contents

This Bullard Bourke Eye Shields kit contains 2 qty 10-32 x 5/8 machine screws, 2 qty #10 3-4 Plastite screws, 2 plastic washers, 2 brass washers and 2 locking nuts.

Bourkes Helmet Installation

- Step 1: Assemble screws, washers and nuts according to Figure 1. Plastic washer should be between brim and Bourke (for helmets with TrakLite, use Plastite screws).
- Step 2: Hand tighten screws with a Phillips head screw driver to a snug fit. Do not over torque to eliminate possible damage to the helmet shell.
- Step 3: Remove the Protective Film from both sides of the Bourkes Lens.

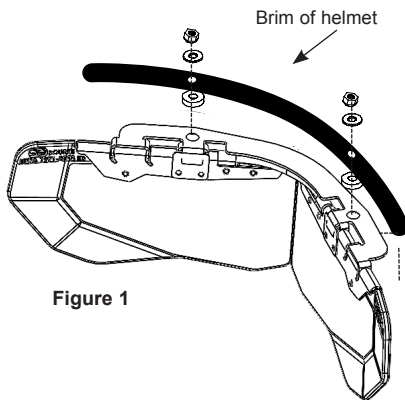


Figure 1

⚠ NOTES

For Use with UST series, Non-Retrak helmets only

- Performance properties of NFPA 1971 cannot be tested by users in the field.
- NFPA 1500, Standard on Fire Department Occupational Safety and Health Program requires members who engage in or are exposed to the hazards of structural firefighting shall be provided with and shall use, a protective ensemble that shall meet the applicable requirements of NFPA 1971 Standard on Protective Ensembles for Structural Fire Fighting and Proximity Fire Fighting.
- The protective ensemble must be used by members only under direct supervision of their fire department or employer in a manner consistent with OSHA 29 CFR 1910.132 General Requirements of Subpart I, Personal Protective Equipment.



Cleaning

Clean eye shields with mild detergent, rinse thoroughly with clean water, and dry with a soft cloth.

Storage

Store eye shields in a cool, dry place away from direct sunlight.

Contamination and Decontamination

Special precautions must be taken if your protective helmet becomes contaminated with chemical or biological hazardous materials. The guidance for these precautions should be coordinated with the appropriate (local, state, and federal) authorities having jurisdiction for hazardous materials (HAZMAT).

Contaminated helmet ensembles should be isolated, contaminate(s) identified, and bodily contact should be avoided. Avoid spreading the contamination to interior spaces of buildings or vehicles, any living quarters, or personal belongings. If possible, seal the contaminated ensemble in a leak proof, sealable, air tight container. Disposal should be done in adherence to local, state, and federal laws. If the helmet is to be reused, it MUST be decontaminated before reuse. Decontamination should be performed using procedures established by decontamination professionals that will remove contaminate(s) while minimizing damage or compromise to the helmet. Failure to do so could result in increased risk of injury, illness, disease, or death.

California Proposition 65 ⚠ WARNING

Cancer and Reproductive Harm - www.P65Warnings.ca.gov.

Propuesta de California 65 ⚠ ADVERTENCIA

Cáncer y Daño Reproductivo - www.P65Warnings.ca.gov.

Proposition de la Californie 65 ⚠ AVERTISSEMENT

Cancer et Troubles de l'appareil reproducteur - www.P65Warnings.ca.gov.



R319 NFPA Bourke Eye Shield Replacement Kit User Manual

Bullard Center

2421 Fortune Drive
Lexington, KY 40509 • USA
877-BULLARD (285-5273)
Tel: +1-859-234-6616
Fax: +1-859-246-0243

Americas Operations

1898 Safety Way
Cynthiana, KY 41031 • USA
877-BULLARD (285-5273)
Tel: +1-859-234-6616
Fax: +1-859-234-8987

Bullard GmbH

Dieselstrasse 8a
53424 Remagen • Germany
Tel: +49-2642 999980
Fax: +49-2642 9999829

Bullard Asia Pacific Pte. Ltd.

51 Changi Business Park Central 2
#03-04 The Signature
Singapore 486066
Tel: +65 6745 0556

©2023 Bullard. All rights reserved.
Bullard is a registered trademark of Bullard.