



⚠ WARNING

THIS MANUAL CONTAINS IMPORTANT SAFETY INFORMATION. READ, UNDERSTAND AND FOLLOW ALL INSTRUCTIONS AND WARNINGS BEFORE WEARING THE HELMET. FAILURE TO FOLLOW ALL INSTRUCTIONS AND WARNINGS CAN CAUSE DEATH OR SERIOUS INJURY.

READ, UNDERSTAND AND FOLLOW ALL INSTRUCTIONS AND WARNINGS BEFORE WEARING THIS HELMET.

Carefully read, understand and follow these instructions. Use this helmet exclusively for the activities for which it is certified (see labeling) and in strict accordance with ANSI/ISEA Z89.1 2014 (R2019). Please refer to the shell label for specific standard "Type" and "Class."

SAFETY CONSIDERATIONS, WARNINGS AND INSTRUCTIONS:

The intended use of the helmet includes activities that can be extremely dangerous. The helmet will not provide the stated protection if the user does not read, understand and follow all instructions and warnings in this user manual and on product labels affixed to the helmet.

1. Type II safety helmets are designed to provide limited protection from impacts to the top, sides, front, and back of the head. The chinstrap is an integral part of the helmet retention system and MUST be worn at all times.
2. AVOID contact with electrical wires when wearing the helmet.
3. NEVER alter or modify the shell or suspension system of the helmet.
4. ALWAYS use Bullard manufactured replacement parts. Non-Bullard manufactured parts are not tested or part of the helmet's certified configuration. Non-Bullard manufactured parts can adversely impact the stated protection of the helmet. Using non-Bullard manufactured parts voids the Bullard warranty for the helmet.
5. Before each use, ALWAYS inspect your helmet and check for cracks and any sign of damage. IMMEDIATELY replace your helmet if there are any signs of wear, damage, abuse, or environmental degradation.
6. If the helmet has sustained a forcible blow or impact, dispose of it IMMEDIATELY, even if there are no visible signs of damage. The helmet is made to absorb the energy of a blow or impact by partial destruction to the shell or foam liner. This type of damage may not be visible.

7. For the helmet to provide the stated protection, it MUST fit or be adjusted to the size of the wearer's head. Read, understand and follow the "Adjusting the Suspension Size" instructions in this user manual.
8. Do NOT modify, alter or remove any of the component parts of the helmet unless recommended by Bullard in this user manual. This includes but is not limited to modifying or adapting the helmet for the purpose of fitting attachments that are NOT authorized by Bullard.
9. Do NOT apply paints, solvents, adhesives, or self-adhesives to the helmet except as instructed by Bullard in this user manual.
10. ALWAYS store the helmet in a clean, dry environment that does not exceed 120°F (49°C).
11. The temperature and electrical insulation performance for the helmet is marked on the product label attached to the helmet. ALWAYS read, understand and follow the product label affixed to the helmet.

⚠WARNING

FAILURE TO READ, UNDERSTAND AND FOLLOW ALL SAFETY CONSIDERATIONS, WARNINGS AND INSTRUCTIONS CAN CAUSE DEATH OR SERIOUS INJURY.

California Proposition 65 ⚠WARNING

Cancer and Reproductive Harm - www.P65Warnings.ca.gov.

Adaptix™ Safety Helmet User Manual

INSTRUCTIONS FOR USE

Adjusting the Suspension Size:


The Adaptix Safety Helmet is equipped with the FlexGen ratchet suspension. To adjust the suspension, grasp the rear headband to the left and right of the ratchet knob and pull until the band clicks. Then turn the ratchet knob counterclockwise until headband opens to largest size. Place the helmet on your head and turn ratchet clockwise until it fits comfortably snug.



A properly adjusted chin strap is crucial for maintaining the helmet's stability and providing the stated protection in case of an impact. To ensure a comfortable and proper fit, the chin strap should fit snugly under the chin. Adjust the chin strap to form a "Y" shape under the ears. There should be no loose sections of the strap.

DO NOT OVERTIGHTEN. (See Figure 1)

Figure 1

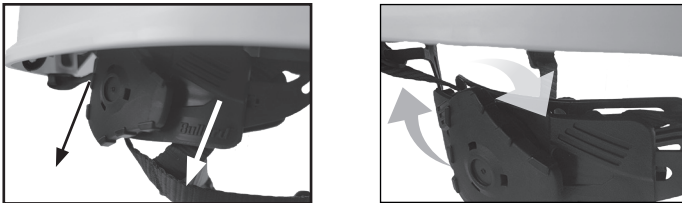


Replacement Parts Instructions:

Accessory Clips (Part #: T2ACR):

This item is available as a set of four clips. To replace the accessory clips, detach the existing clips from the interior of the helmet and securely attach the new clips in their designated positions, clips are labeled FL, FR, RL, and RR. (See Figure 2)

Figure 2

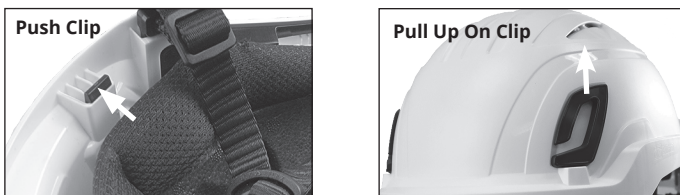


Replacement Recommendations:

Bullard recommends replacing the comfort crown pad liner, brow pad, and the chin strap every 12-18 months or more frequently as needed.

Comfort Brow Pad and Hammock (Part #: T2HR):

To replace the brow pad and hammock, unfasten them from the front of the headband suspension and the rear of the helmet. Install the new components by wrapping the brow pad around the suspension, guiding the hook-and-loop strips through the rear slots of the helmet, and making the necessary adjustments for a proper fit. Pro Tip – removing the suspension from the helmet makes the assembly and disassembly easier. (See Figure 3)


Figure 3

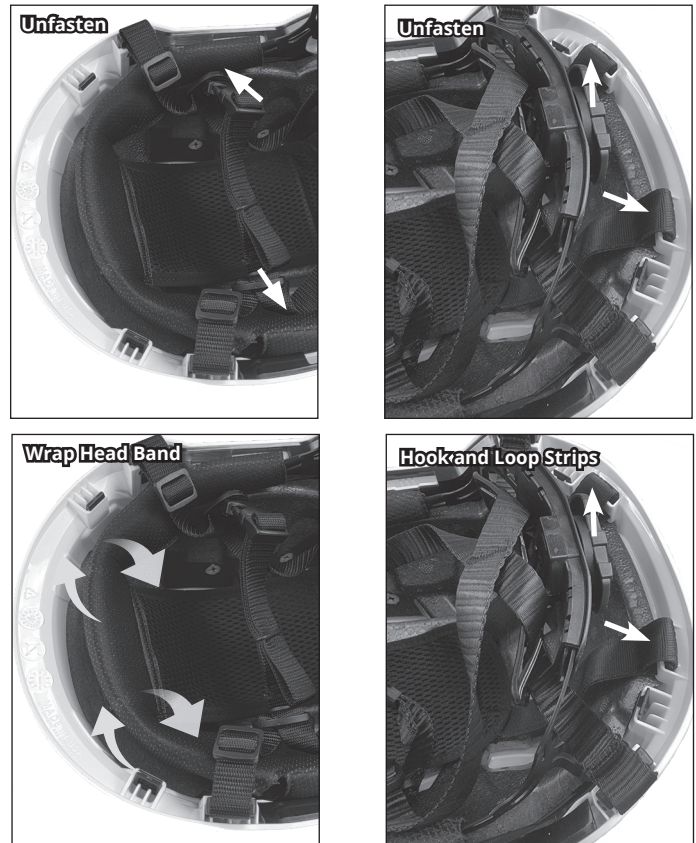

Headband Suspension (Part #: T2HBR):



This item includes the T2HR within the assembly kit. To replace the headband suspension, unclip it from both sides of the helmet by pushing the side brackets upward and remove the existing suspension. Install the new suspension by aligning the rear nape extensions with the designated slots and inserting the suspension on each side of the helmet. (See Figure 4)

Figure 4

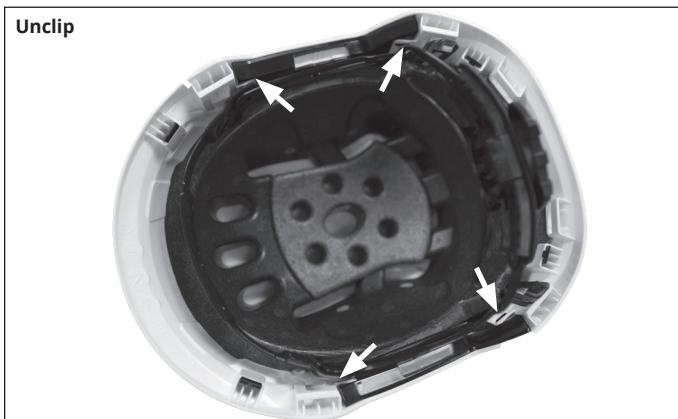**Chinstrap (Part #: T2CSRBC or T2CSRFR):**

To remove and replace the chinstrap, unclip it from the helmet at the four anchor points. When attaching the new chinstrap, ensure that the shorter crossed section is oriented towards the rear nape of the helmet. (See Figure 5)

Figure 5

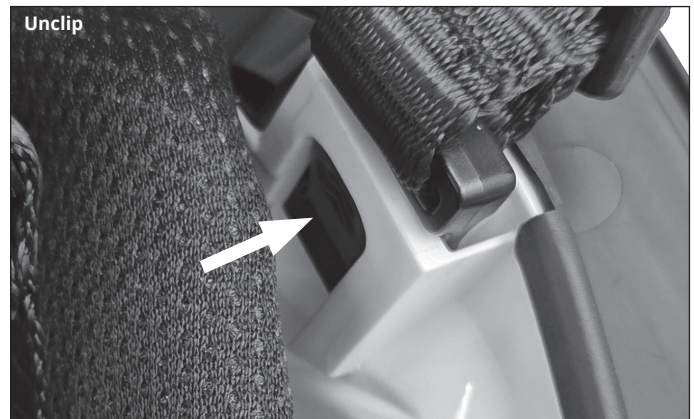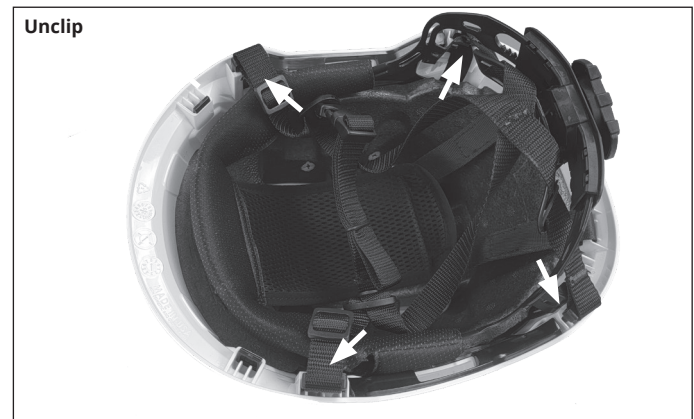**⚠WARNING**

FAILURE TO READ, UNDERSTAND AND FOLLOW ALL INSTRUCTIONS AND WARNINGS IN THIS USER MANUAL AND ON THE PRODUCT LABELS AFFIXED TO THE HELMET CAN CAUSE DEATH OR SERIOUS INJURY.

Adaptix™ Safety Helmet

User Manual

FlexBrim Part #: FBXX
(XX = Color, FBBK is
FlexBrim Black)
if included

Accessory Clips
Part #: T2ACR


Shell
(Non Replaceable)

Foam (Non Replaceable)

**Comfort Brow Pad and
Hammock Part #: T2HR**

Chin Strap
Part #: T2CSRBC or T2CSRFR

Headband Suspension
Part#: T2HBR

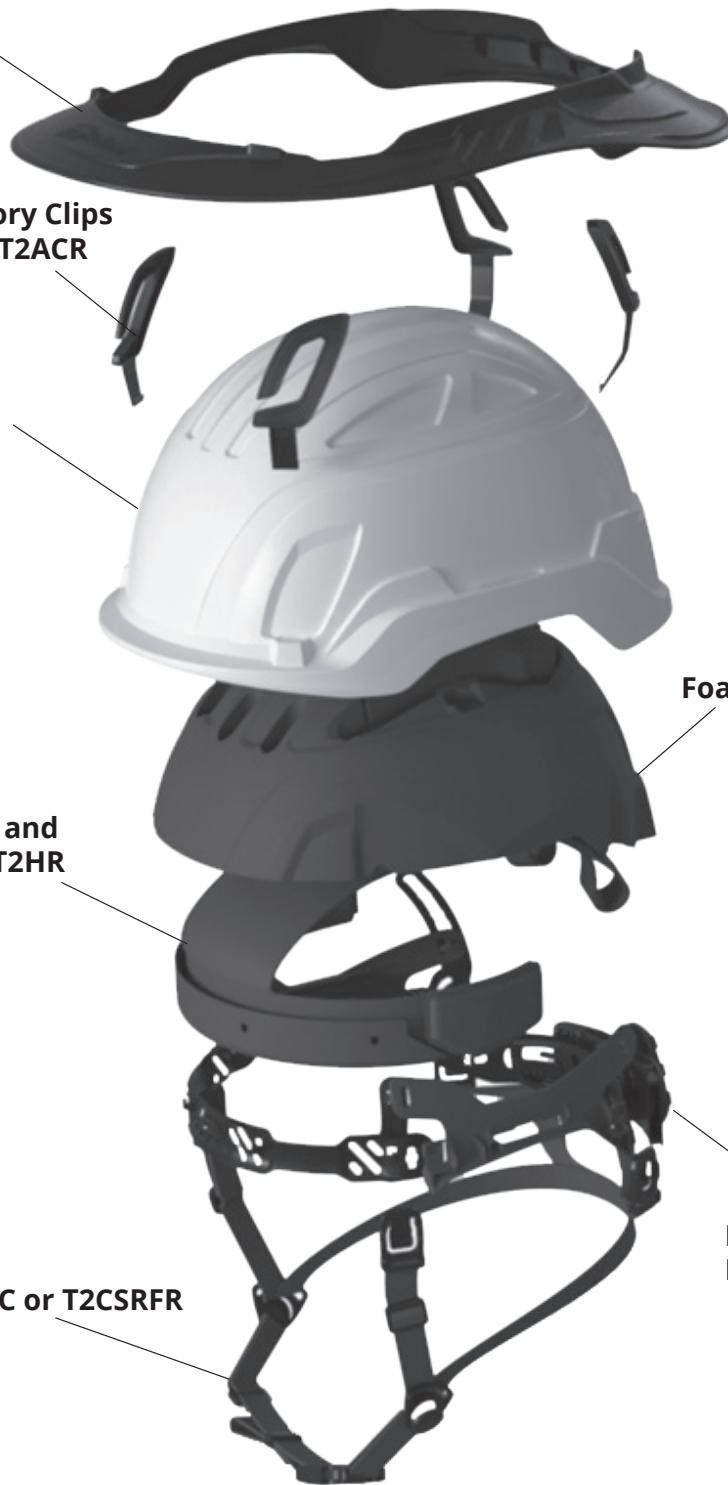

INSTRUCTIONS FOR HELMETS EQUIPPED WITH THE MIPS SYSTEM:

⚠ WARNING

NO HELMET OR IMPACT PROTECTION SYSTEM CAN PROTECT A USER FROM ALL INJURIES. ALTHOUGH THE MIPS® SYSTEM HAS BEEN DESIGNED TO REDUCE ROTATIONAL ENERGIES TO THE HEAD, WHICH MAY LEAD TO BRAIN INJURIES, THERE ARE LIMITS TO THE PROTECTIVE CAPABILITIES OF ALL HELMETS, INCLUDING HELMETS WITH THE MIPS® SYSTEM. USERS ARE WARNED NOT TO REMOVE, REPOSITION OR OTHERWISE TAMPER WITH THE MIPS® SYSTEM IN A HELMET OR USE A HELMET WITH THE MIPS® SYSTEM IF THE MIPS® SYSTEM IS DAMAGED OR DISPLACED.

PRODUCT DISCLAIMER NOTICE:


MIPS AB AND ITS AFFILIATES (COLLECTIVELY, "MIPS") DO NOT WARRANT THAT AN INDIVIDUAL WHO SUFFERS A COLLISION, FALL, OR OTHER BLOW TO THE HEAD OR PERSON WHILE WEARING A HELMET EQUIPPED WITH THE MIPS® SYSTEM WILL NEVER SUFFER ANY CONCUSSION OR OTHER INJURY TO THE BRAIN, THE HEAD, OR OTHER BODY PARTS. USER ASSUMES ALL RISKS, INCLUDING ALL RISKS OF BODILY INJURY, DEATH OR PROPERTY DAMAGE, ARISING OUT OF USER'S ACTIVITIES WHILE WEARING A HELMET EQUIPPED WITH THE MIPS® SYSTEM. TO THE EXTENT PERMITTED BY APPLICABLE LAW, MIPS EXPRESSLY DISCLAIMS ALL WARRANTIES OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING THOSE CONTAINED IN UCC SECTIONS 2-314 AND 2-315.

The Mips system is preinstalled in the helmet and is not removeable (or replaceable) by user. The Mips system is designed to help redirect rotational motion to the head.

Headband Suspension With Mips (Part #: T2HBRM)

This item includes the T2HR within the assembly kit. To replace the Mips headband suspension, remove the comfort brow pad and hammock following the instructions noted in Figure 3, Page 3. Then unfasten the headband suspension from the Mips system by rotating the band in each of the four areas until the T-shape aligns with the slot. (Figure 6)




Figure 6

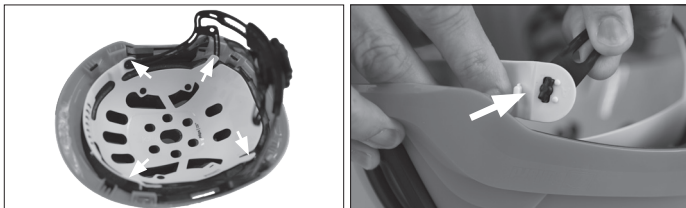

Headband Suspension With Mips - Installation (Part #: T2HBRM)

Install the new suspension by aligning the Mips headband suspension with the rear nape of the helmet and inserting and rotating each T-shape into the Mips system. Then reinstall the comfort brow pad and hammock, by following the instructions noted in Figure 3, Page 3.

Figure 7

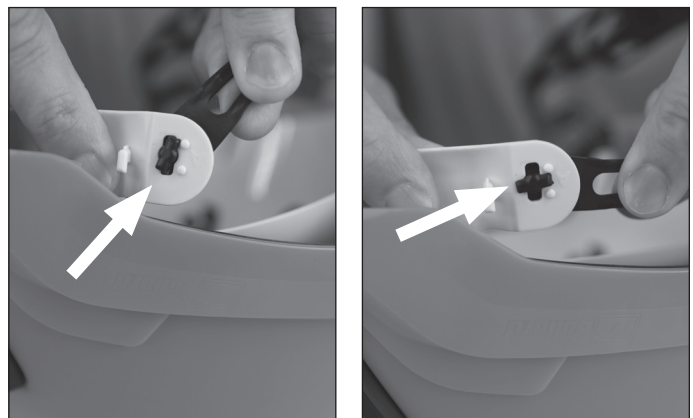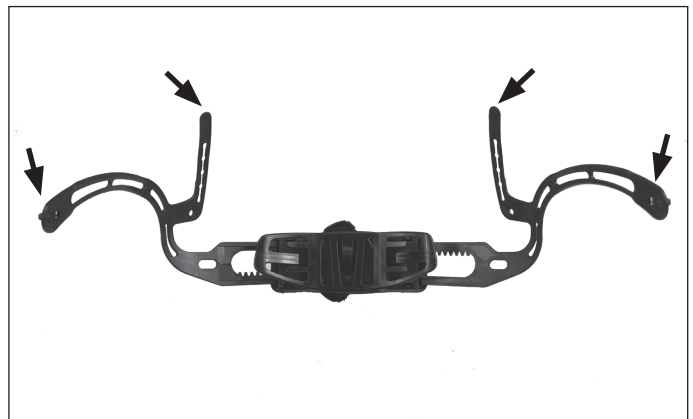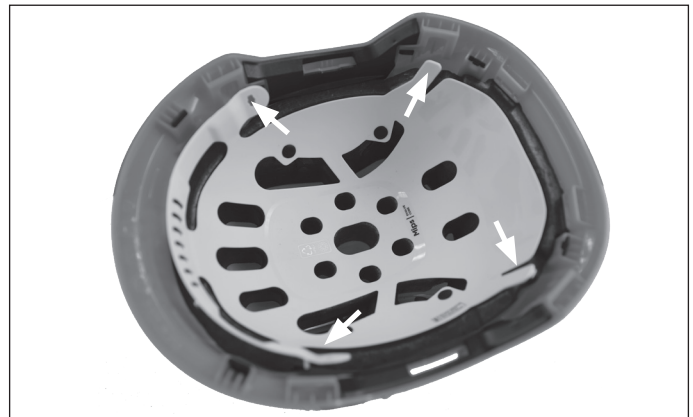

Adaptix™ Safety Helmet

User Manual

FlexBrim Part #: FBXX
(XX = Color, FBBK is
FlexBrim Black)
if included

Accessory Clips
Part #: T2ACR

Shell
(Non Replaceable)


Mips

Foam (Non Replaceable)

Comfort Brow Pad and
Hammock Part #: T2HR

Headband Suspension
With Mips
Part#: T2HBRM

Chin Strap
Part #: T2CSRBC or T2CSRFR

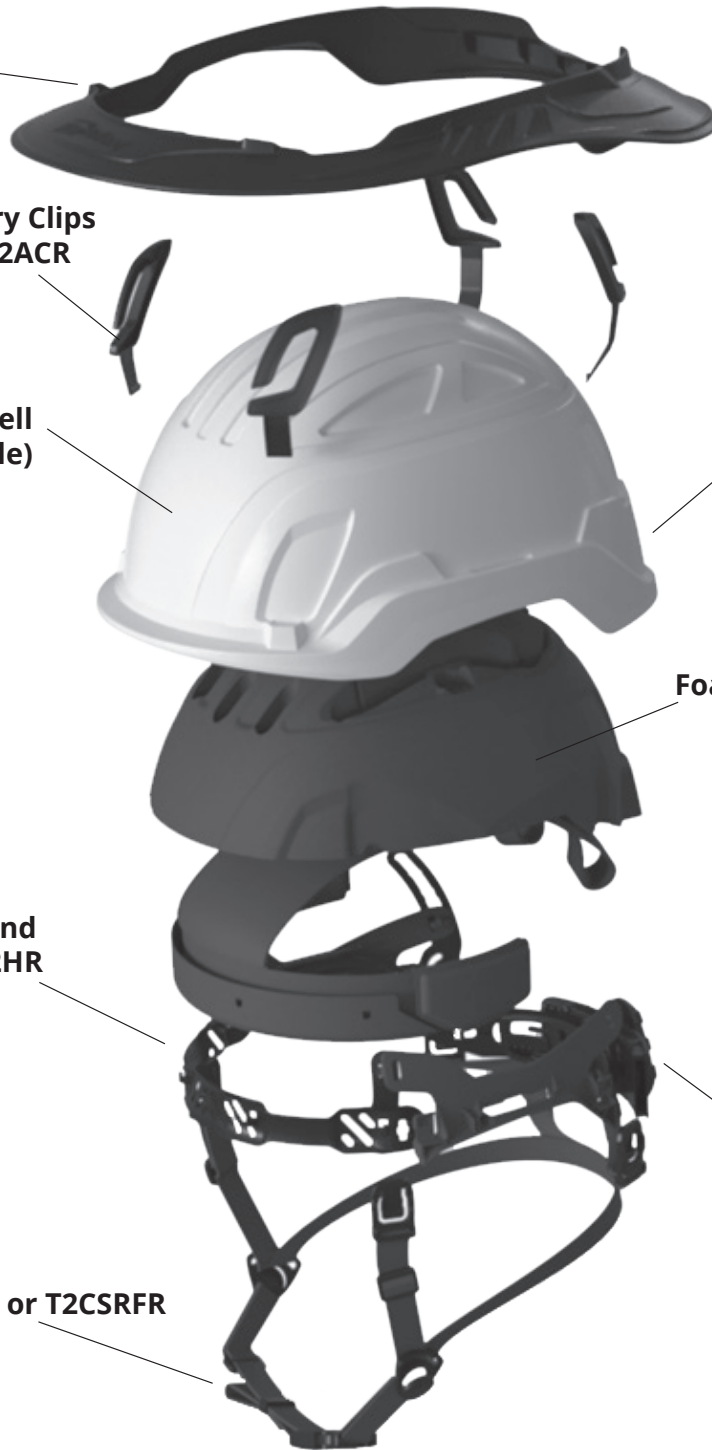

SAFETY CONSIDERATIONS AND INSTRUCTIONS FOR DOWNLOADING THE TWICEME APP:

1. Read, understand and follow all instructions for the proper use of the Twiceme feature as provided by Twiceme. These instructions can be found on their website at <https://www.twiceme.com>.
2. Your helmet is equipped with a Twiceme NFC chip that allows Emergency Responders to access emergency information by tapping the helmet with an NFC-enabled smartphone or mobile computer.
3. This chip is preinstalled in the helmet and is not removeable (or replaceable) by the user.
4. Do not scratch, puncture, damage or remove the Function Symbol (see pg. 9). This could impact the usefulness of the Twiceme feature and affect the response by Emergency Responders.
5. Your data is collected and stored by Twiceme. Bullard does not collect or process the information you enter in the Twiceme app. Twiceme does not share this information with Bullard. You should read and understand Twiceme's Privacy Notice which can be found on their website at <https://www.twiceme.com>.

How to Activate your Equipment with Twiceme:

<https://www.twiceme.com/getstarted>

1. Download the Twiceme app and create your medical ID. Get the free Twiceme app from the Google Play or App Store.
2. Add Equipment: Select and add the equipment you wish to activate in the app.
3. Upload Information: Press the upload button in the app to upload Medical ID by holding the scanning area of your smartphone directly on top of the functional symbol on your PPE equipment.
4. Activate - Press the circular "Scan" button on the bottom right menu to activate the scanner. Then tap the phone on the equipment to access the locally stored information uploaded by the user.

If you experience any issues with the Twiceme feature, please go to <https://www.twiceme.com/support>.

⚠WARNING

READ, UNDERSTAND AND FOLLOW ALL INSTRUCTIONS AND WARNINGS BY BULLARD AND TWICEME. FAILURE TO DO SO CAN RENDER THE PRODUCT UNSAFE FOR USE.

Adaptix™ Safety Helmet User Manual

FlexBrim Part #: FBXX
(XX = Color, FBBK is
FlexBrim Black)
if included

Accessory Clips
Part #: T2ACR

Shell
(Non Replaceable)

Comfort Brow Pad and
Hammock Part #: T2HR

Chin Strap
Part #: T2CSRBC or T2CSRFR


Function Symbol



Helmet Mark

Foam (Non Replaceable)


Headband Suspension
Part#: T2HBR

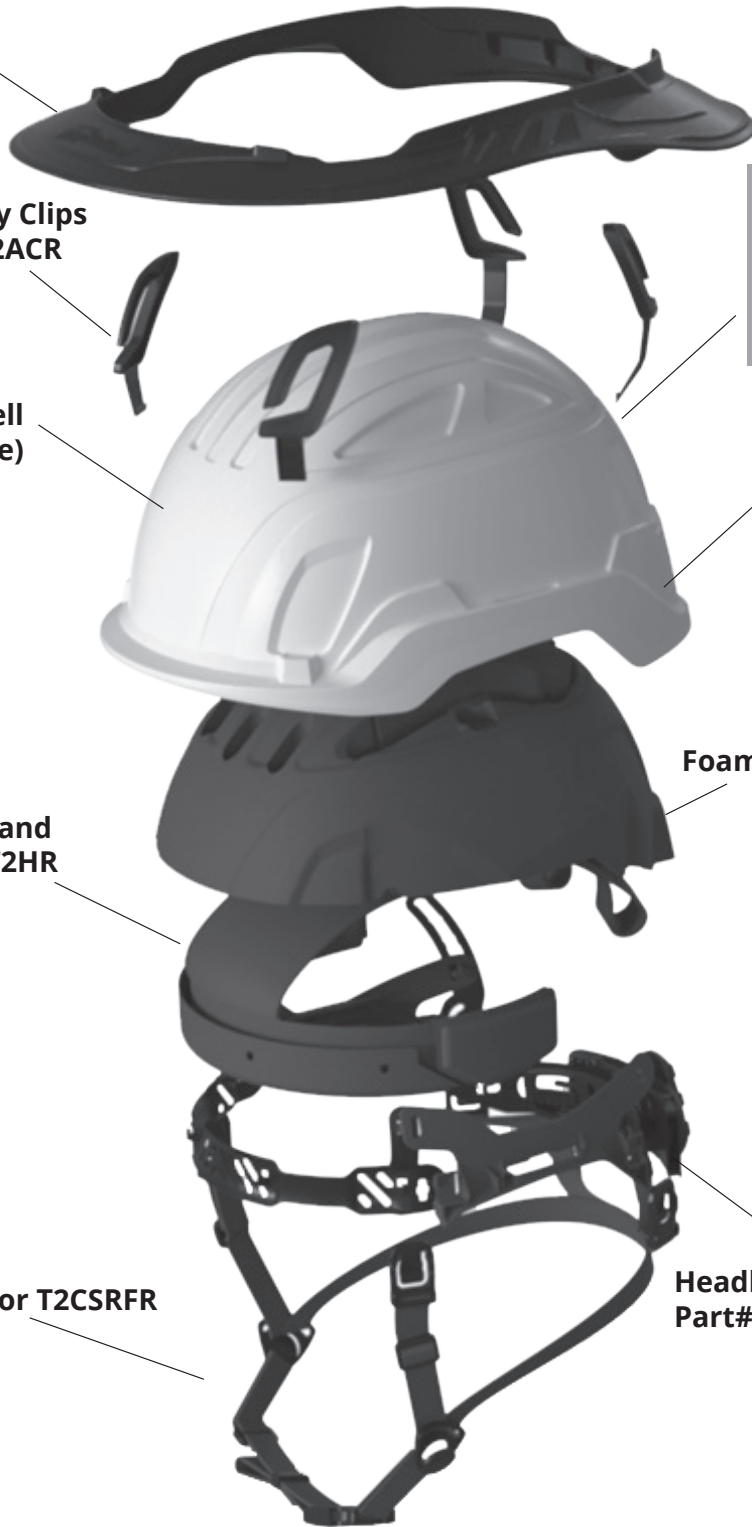

FlexBrim Installation

1. Identify the front of the brim by locating the Bullard logo. The 'FlexBrim' name appears on the rear for added reference. (See Figure 8)

Figure 8

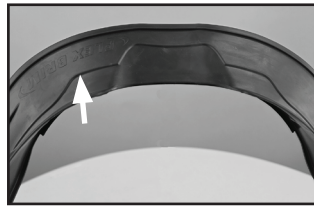


2. Place brim over helmet, push brim onto helmet until it feels secure (will not fall off when helmet is flipped over). (See Figure 9)

Figure 9




3. Flip helmet upside down, begin installation at the rear. Hook the back of the brim over the safety helmet's edge. Ensure the rear gutter aligns with the safety helmet's ridge, then press along the edge to secure. (See Figure 10)

Figure 10

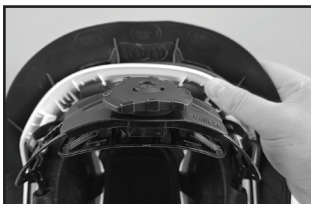

4. At the front of the helmet, ensure the brim rests against the edge of the base helmet. (See Figure 11)

Figure 11

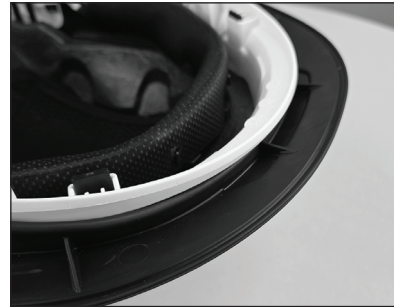

5. Turn helmet over – bracing the helmet (works great sitting down with helmet on knees) start at right edge, pushing and folding at the same time- this will allow the front gutter to move over the helmet edge – move right to left, pushing and folding – until the gutter clicks in place (See Figure 12)

Figure 12



6. Turn hat over and make sure the front gutter sits correctly along the shell and press firmly along the front edge to lock it in place. (See Figure 13)

Figure 13



Adaptix™ Safety Helmet

User Manual

Cleaning, Replacing, and Storage:

Clean the helmet with mild soap and lukewarm water. Do NOT use paint, solvents, chemicals, adhesives, gasoline, or like substances on the helmet. The impact resistance and other protective properties of the helmet may be diminished by such substances. Damage caused by these substances may not be apparent or readily detectable by the user.



NOTE:

Stickers may contain materials that in time can alter the physical properties of the helmet. Before applying any of these products, verify their compatibility with HDPE.

Storage:

Store the helmet in a clean, dry environment, not over 120°F (49°C). Do NOT store in direct sunlight. Do NOT store helmet in areas such as the dashboard of an automobile or truck bed of a work vehicle.

Service Life:

The helmet does not have an indefinite service life. Conditions found in many work environments such as exposure to ultraviolet light, temperature extremes, chemical exposure, and wear and tear from daily use will reduce the protective properties of the helmet over time.

The helmet in its entirety should be replaced every five years. Please refer to your company guidelines to see if your employer has a specific replacement program. It is noted that you must inspect your helmet regularly for cracks or any damage before each use. If any damage appears, this will compromise the stated protection of the helmet. While Bullard recommends replacing the helmet every five years, other factors including but not limited to helmet usage, working conditions, environment, storage of the helmet, and chemical exposures, may require the helmet to be replaced before the five (5) year mark.

Adaptix™ Safety Helmet User Manual

Three-Year Limited Warranty

Please read this section carefully, as it contains valuable information about the type of warranty, the purchaser's obligations, warranty coverage, limitations, exclusions, and other terms and conditions that may affect Bullard's obligations under this warranty.

Bullard warrants to the original purchaser that the helmet is free of defects in materials and workmanship under intended use and service for a period of three (3) years from the date of manufacture. This warranty is not transferable.

Bullard's obligation under this warranty is only to repair or replace, at Bullard's discretion, items returned within the warranty period and determined by Bullard to be defective, subject to the following limitations:

- a) the helmet must be returned to Bullard with shipping charges prepaid;
- b) the helmet must not be altered from its original factory configuration; and
- c) the helmet must not have been misused, abused, or damaged in storage or transit.

WARRANTY EXCLUSIONS DISCLAIMERS:

THIS WARRANTY IS IN LIEU OF ANY OTHER WARRANTY, EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION, ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. TO THE EXTENT ANY IMPLIED WARRANTY IS REQUIRED BY LAW, IT IS LIMITED IN DURATION TO THE EXPRESS WARRANTY PERIOD IN THIS SECTION. NEITHER BULLARD NOR ITS DISTRIBUTORS SHALL BE LIABLE FOR ANY INCIDENTAL, CONSEQUENTIAL, INDIRECT, SPECIAL, OR PUNITIVE DAMAGES OF ANY NATURE, INCLUDING WITHOUT LIMITATION, LOST PROFITS, BUSINESS INTERRUPTION, OR ANY OTHER DAMAGE WHETHER BASED IN CONTRACT, TORT, OR OTHERWISE.

Some states do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above exclusion or limitation may not apply to you. This warranty gives you specific legal rights and you may also have other rights that vary from state to state.

THIS LIMITED WARRANTY EXPRESSLY EXCLUDES PRODUCT MAINTENANCE. ANY MISUSE, ALTERATION, MODIFICATION, REPAIR, ATTEMPTED REPAIR, IMPROPER MAINTENANCE, NEGLIGENCE, ABUSE OR FAILURE TO FOLLOW THE PRODUCT INSTRUCTIONS, DAMAGE OR ANY OTHER IMPROPER CARE OR MISHANDLING OF THE PRODUCT VOIDS THIS LIMITED WARRANTY.

The foregoing is the only warranty made by Bullard. No representative, dealer or any other person is authorized to make any warranty, representation, condition or promise on behalf of Bullard with respect to this product. No terms or conditions other than those stated herein or provided by law, and no agreement or understanding, oral or written, in any way purporting to modify this warranty shall be binding upon Bullard, unless made in writing and signed by an authorized employee of Bullard.

Return Authorization:

Contact Bullard Customer Service at +1.877.285.5273 to obtain written permission to return product. Material returned for credit will be subject to factory inspection.

Current products or products under warranty may be subject to a restocking charge. Returned items should be sent to Bullard with shipping prepaid.

Bullard Center
2421 Fortune Drive
Lexington, KY 40509 • USA
877-BULLARD (285-5273)
Tel: +1-859-234-6616
Fax: +1-859-246-0243

Americas Operations
1898 Safety Way
Cynthiana, KY 41031 • USA
877-BULLARD (285-5273)
Tel: +1-859-234-6616
Fax: +1-859-234-8987

Bullard GmbH
Dieselstrasse 8a
53424 Remagen • Germany
Tel: +49-2642 999980
Fax: +49-2642 9999829

Bullard Asia Pacific Pte. Ltd.
51 Changi Business Park
Central 2
#03-04 The Signature
Singapore 486066
Tel: +65 6745 0556